



ネジロック使用


Apply thread locking fluid

: No.9,11,22,25,26,28


Torque list

[N·m]

M5	M6	M8	M10
5.0	10.0	22.0	34.0


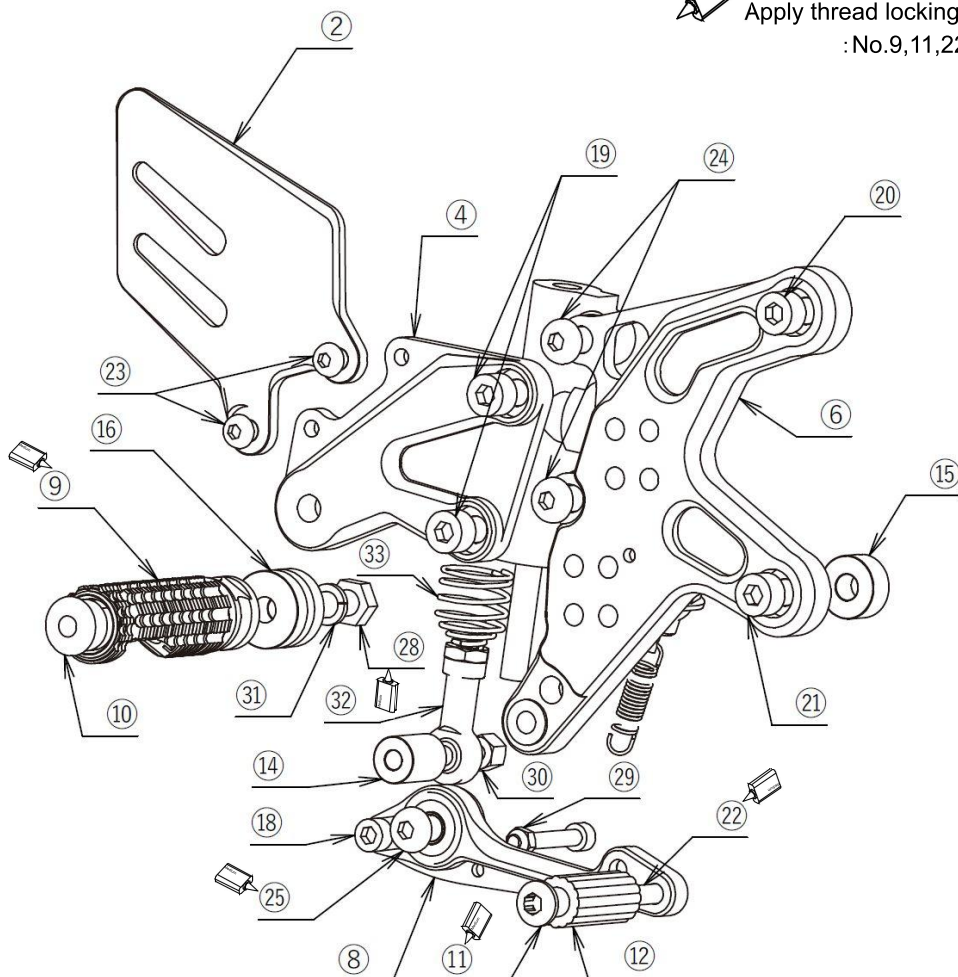


ブレーキスイッチ取付

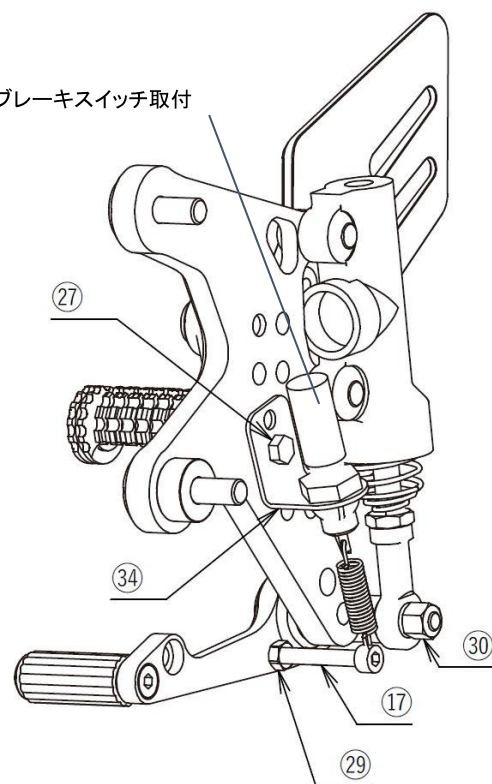


④を使用する場合は純正カバーは取付不可


When using ④, the OEM cover cannot be installed.

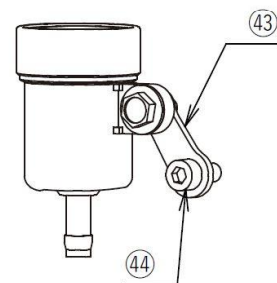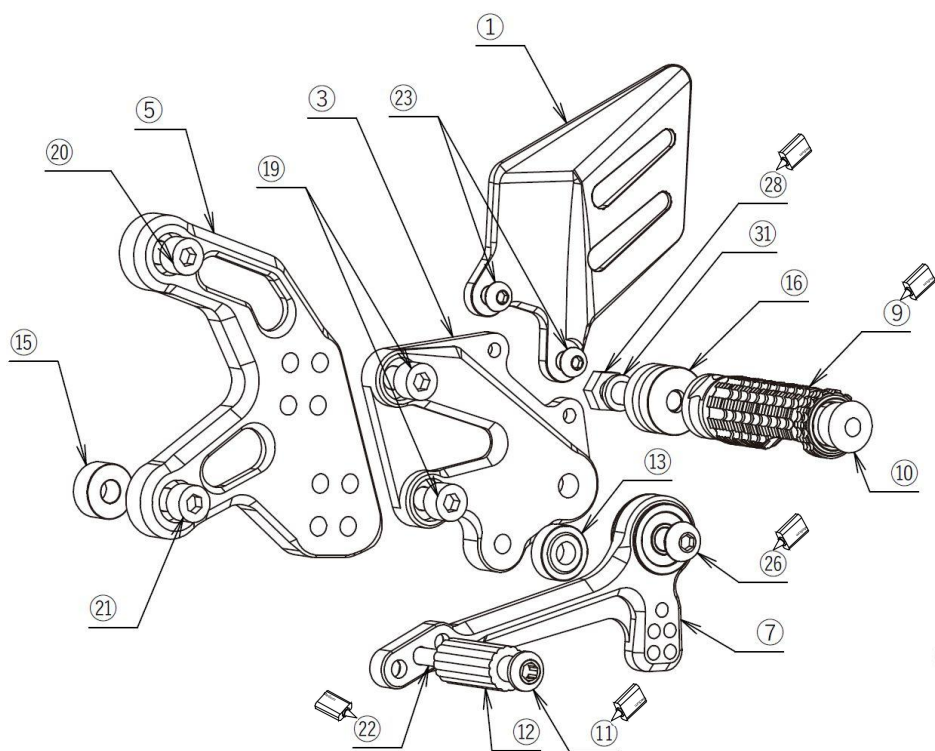

2026年-

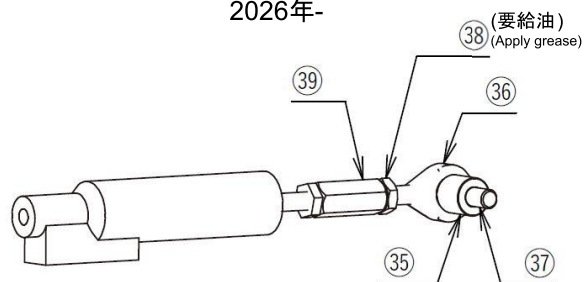

2018年-2025年

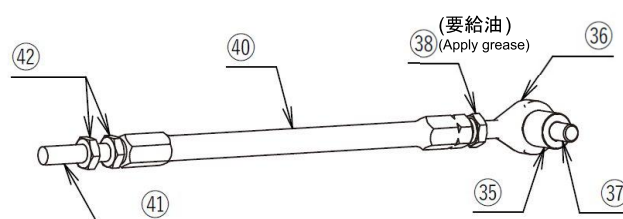

No.	Part No.	Description 品名	QTY
1	559-196-V110	ヒールプレート TYPE-1 LH (QRコード付き)※	1
2	559-196-V210	ヒールプレート TYPE-1 RH※	1
3	V-004-SP156YGL	ステッププレートL※	1
4	V-004-SP156YGR	ステッププレートR※	1
5	V-004-BS132YGL	ペースプレートL※	1
6	V-004-BS132YGR	ペースプレートR※	1
7	V-004-CPS675YG	シフトペダルSCP65-75※	1
8	V-004-BPSS165YG	ブレーキペダルSSBP165※	1
9	V-R04-FP101YG	ステップバー ロックタイプ※	2
10	V-004-FP002	エンドキャップ	2
11	V-004-FP003BK	ペダルバー-AL アルミ	2
12	V-004-FP004	ペダルラバー	2
13	V-004-SK0801BK	ステップカラー t17.5 20x8	1
14	V-KL191506BK	スペーサーカラー t19 15×6	1
15	V-KL092008BK	スペーサーカラー t9 20×8	2
16	V-KL152408YG	ペースカラー t15 24x8	2
17	V-SH005-035	キャップボルト M5×35	1
18	V-SH006-045	キャップボルト M6×45	1
19	V-SH008-015	キャップボルト M8×15	4
20	V-SH008-020	キャップボルト M8×20	2
21	V-SH008-030	キャップボルト M8×30	2
22	V-LH006-020	ローヘッドキャップボルト M6×20	2

No.	Part No.	Description 品名	QTY
23	V-BH006-010	ボタンボルト M6×10 SUS	4
24	V-BH008-020	ボタンボルト M8×20 SUS	2
25	V-BH008-025	ボタンボルト M8×25 SUS	1
26	V-BH008-030	ボタンボルト M8×30	1
27	V-BT005-006	六角ボルト M5×6	1
28	V-BT008-040	六角ボルト M8×40	2
29	V-NT005	ナット M5	1
30	V-NTL006	ロックナット M6	1
31	V-SW008C	スプリングワッシャー M8	2
32	V-004-LE005	ロッドエンド 6-M8♀	1
33	V-007-BS007	リターンスプリング 40	1
34	V-007-BS011	PULLスイッチステーΦ16	1
35	V-KL121206BK	スペーサーカラー t12 12x6	1
36	V-004-LE001	ロッドエンド M6 R	1
37	V-BT006-030	六角ボルト M6×30	1
38	V-NT006S	ウスナット M6 R	1
39	V-004-CR025BK	ロングナット M6-25	1
40	V-004-CR145BK	シフトロッド 145mm	1
41	V-SD006L-45	Lネジ M6x45	1
42	V-NT006SL	ウスナット L M6 L	2
43	V-005-UM60625BK	ユニバーサルステーΦ6-M6L25	1
44	V-SH006-015	キャップボルト M6×15	1

Installation 取り付け方法

1. 純正サービスマニュアルを参照し、純正ステップを取り外してください。その後、分解図およびトルク表に従い、本製品を取り付けてください。作業時は怪我防止のため、ステップバー⑨を養生してください。

2. ブレーキスイッチは純正品をそのまま使用します。

3. PULLスイッチステーおよびスイッチはベースプレート裏側に取り付けてください。

4. スイッチスプリングは図を参照し、ペダル側のボルトに引っ掛けて使用してください。

5. 純正ブレーキリザーバータンクを取り付けた際にブレーキホースに変形やつぶれが見られる場合は、④③、④④を使用して移設してください。その際は純正リザーバータンクカバーは使用できません。

6. ステップバー、ペダル、およびペダルバーの位置を、お好みの位置に調整してください。

7. ブレーキスイッチの調整を行い、ブレーキランプの点灯を確認してください。

8. 各部の静止時および可動時に干渉がないこと、ならびに操作に不具合がないことを確認し、増し締めしてください。

9. 完成後および走行前には、必ず各部の点検・増し締め・調整を行ってください。
- 1.Remove the stock footrest assembly according to the OEM Service Manual. Install this product as shown in the exploded view and tighten all fasteners to the specified torque values. To prevent injury during installation, protect the Step Bar ⑨ with suitable protective material before performing the work.

2.Use the OEM brake switch as is.

3.Install the pull switch bracket and switch on the back side of the base plate.

4.Install the switch spring by referring to the diagram, and hook it onto the pedal-side bolt for use.

5.If deformation or kinking of the brake hose occurs when installing the OEM brake reservoir tank, relocate it using parts ④③ and ④④. In this case, the OEM reservoir tank cover cannot be used.

6.Adjust the positions of the step bar, pedal, and pedal bar to your preferred position.

7.Adjust the brake switch and check that the brake light illuminates.

8.Check that there is no interference between parts both when stationary and during movement, and that there are no operational issues. Then retighten all fasteners.

9.After assembly and before riding, always check all components and perform retightening and adjustment as necessary.